 
 


PRODUCT INTRODUCTION

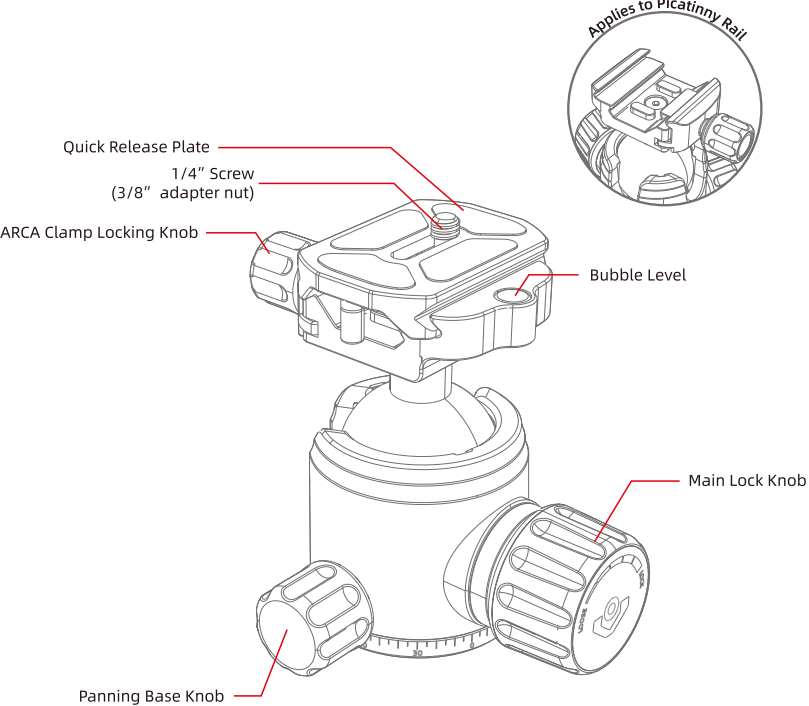 


Please refer to user manual carefully before using

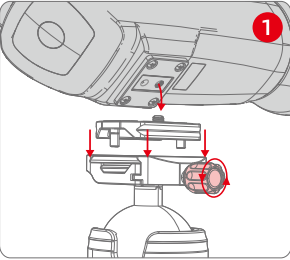


1. Application of quick release plate

Release the quick release plate, loosen the locking knob. Align the screw hole of your device with the 1/4" screw on the quick release plate (or use a 3/8" adapter nut if necessary). Tighten the screw on the quick release plate. Attach the quick release plate back onto the clamp of your ball head platform and secure it.

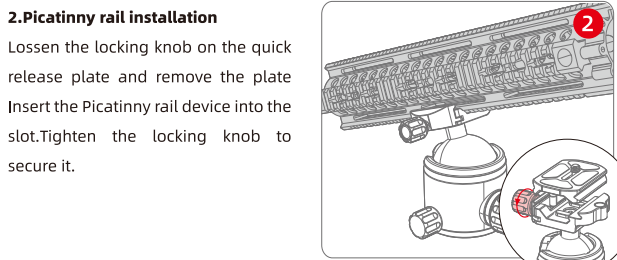


2. Picatinny rail installation

 Loosen the locking knob on the quick release plate and remove the plate. Insert the Picatinny rail device into the slot. Tighten the locking knob to secure it.

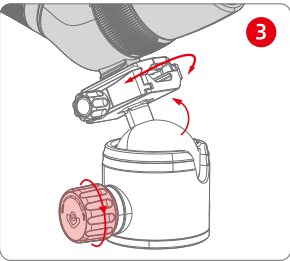

3. Using the main lock knob

 - 1 Rotate the main lock knob anticlockwise to release the ball head, allowing you to adjust the device in various angle.
 - 2 Rotate the main lock knob clockwise to lock the device in place.
- The maximum vertical adjustment angle is 90°.

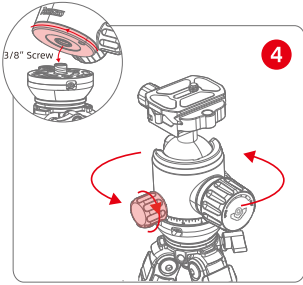

4. Mount the ball head onto the tripod

- 1 Tighten the panning base knob clockwise to prevent the bottom of the ball head from rotating.
- 2 Align the ball head screw hole with the 3/8" nut on the tripod and tighten clockwise to secure the ball head to the tripod.
- 3 Loosen the main lock knob, adjust the device angle until the bubble level is horizontal, then tighten the main lock knob.
- 4 Loosen the panning base knob to allow for horizontal rotation adjustment.

Load Capacity:

RSRH-01DC: Maximum payload of 20kg

RSRH-02DC: Maximum payload of 30kg

Exceeding these weight limits may compromise the stability and safety of the ball head.

For more information on related products, please visit:

<https://www.vectoroptics.cn/>



CAUTIONS

- Do not overload product max capacity.
- Ensure Centre Column and/or Base Plate is tightened as much as possible by hand.
- The product is not suitable for use in temperatures below -20°C (-4°F) or above 70°C (158°F). The product is not suitable for use in salt water.
- Do not leave the product in direct sunlight, or against car windows for long periods of time.
- Remove the equipment when the product is not in use, or moving about.
- Do not use equipment lubrication on this product. Only use a standard lubricant or grease when necessary.

FIVE YEARS LIMITED WARRANTY

Your ROKSTAD product is warranted free of defects in materials and workmanship for a period of 5 years from the time of purchase by the original purchaser. This warranty covers accidental damage, as well as any defects in materials and workmanship. Damages caused by misuse or improper handling are not covered. In the event of a defect under this warranty, we promise to repair or replace your product and ship it back to you absolutely free of charge. Also, this warranty is null and void if modification or maintenance is provided by someone other than Vector Optics. This warranty is non-transferable. For products not directly purchased from us, please contact the local dealer for an applicable warranty.

<https://www.vectoroptics.com/Warranty-Registration/>

For more details please visit our website, thanks for your support!

Authorised Dealer (Name): _____

Contact Details (Phone and Email): _____

Product No: _____

Purchase Date: _____

Inspection Date: _____

Warranty Date: _____

Return Date: _____

***Please ensure the Authorised Dealer completes the form above**

▼ Scan the QR code to learn more about VectorOptics



VECTROPTICS



USER MANUAL



FACEBOOK



INSTAGRAM

