



Please refer to user manual carefully before using

FIVE YEARS LIMITED WARRANTY

Your ROKSTAD product is warranted free of defects in materials and workmanship for a period of 5 years from the time of purchase by the original purchaser. This warranty covers accidental damage, as well as any defects in materials and workmanship. Damages caused by misuse or improper handling are not covered. In the event of a defect under this warranty, we promise to repair or replace your product and ship it back to you absolutely free of charge. Also, this warranty is null and void if modification or maintenance is provided by someone other than Vector Optics. This warranty is non-transferable. For products not directly purchased from us, please contact the local dealer for an applicable warranty.

<https://www.vectoroptics.com/Warranty-Registration/>

 
 
For more details please visit our website, thanks for your support!

Authorised Dealer (Name): _____
Contact Details (Phone and Email): _____
Product No: _____
Purchase Date: _____
Inspection Date: _____
Warranty Date: _____
Return Date: _____

*Please ensure the Authorised Dealer completes the form above.



PRODUCT ILLUSTRATION

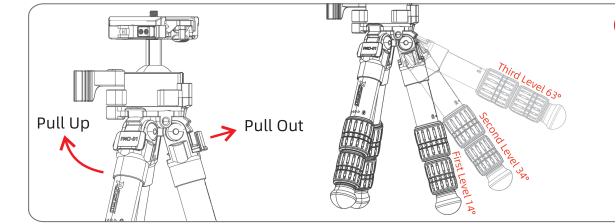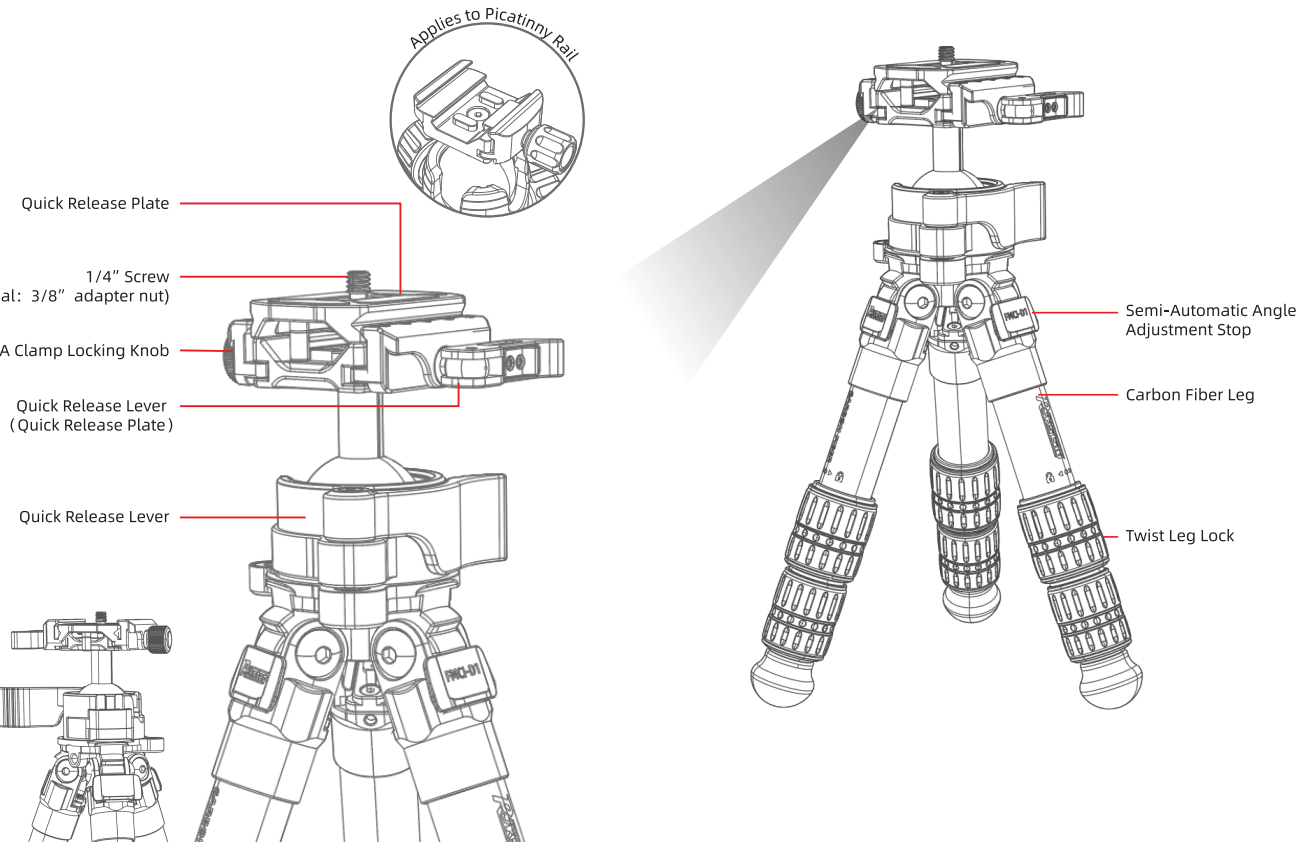

1. Tripod Extension (as picture shown)

Pull out the semi-automatic angle adjustment stop and extend the leg tubes outward. Each leg tube can be adjusted to three different heights: low, medium, and high. Once the desired angle is reached, push the semi-automatic angle adjustment stop to the locked position.

 
The adjustable angles for the three positions are as follows:

First Level (low) : 14 degrees

Second Level (medium) : 34 degrees

Third Level (high) : 63 degrees

When the leg tube is in the third or second level, simply retract the leg tube and the semi-automatic angle adjustment stop will automatically slide into the slot of the next position, fixing the angle.

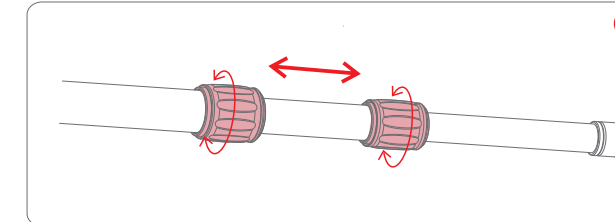


2. Tripod Leg Extension (as picture shown)

Adjust the leg length, first twist the twist leg lock clockwise (when viewed from above) to loosen the tension. Extend the leg to your desired length, then twist the twist leg lock counterclockwise (when viewed from above) to secure it in place.

Product Specification

Sections	Extended	Folded	Weight	Leg Max.Load	Leg Dia
3	14.37in/365cm	5.04in/128cm	1.65lb/0.75kg	44.09lb/20kg	0.87in/22mm


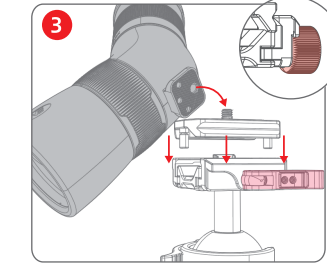 


3. Application of quick release plate

Loosen the locking knob or lever to remove the quick release plate. Align the screw hole of your device with the 1/4" screw on the quick release plate. Tighten the screw on the quick release plate. Attach the quick release plate back onto the clamp of your ball head platform and secure it.


4. Picatinny rail installation

  Loosen the locking knob or lever to remove the quick release plate and remove the plate. Insert the Picatinny rail device into the slot. Tighten the locking knob to secure it.

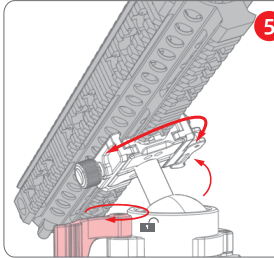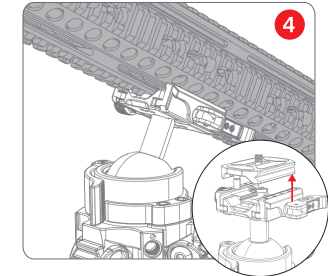

5. Using the Quick Release Plate

 - ① Rotate the Quick Release Plate clockwise to release the ball head, allowing you to adjust the device in various angle.
- ② Rotate the Quick Release Plate anticlockwise to lock the device in place.
- The maximum vertical adjustment angle is 90°.

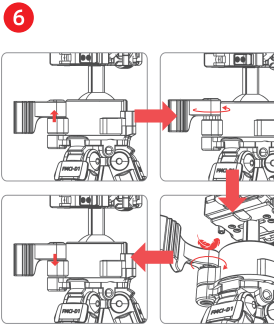

6. Adjusting the Quick Release Plate Tension

- ① Lift the Quick Release Plate upwards until the mounting screw is fully exposed.
- ② Rotate the Quick Release Plate. Turning it counterclockwise reduces the clamping force; turning it clockwise increases the force.
- ③ Adjust to the desired tension level. Press the Quick Release Plate into the corresponding latch until it clicks securely into place.

CAUTIONS

- Do not overload product max capacity.
- Ensure Centre Column and/or Base Plate is tightened as much as possible by hand.
- The product is not suitable for use in temperatures below -20°C (-4°F) or above 70°C (158°F). The product is not suitable for use in salt water.
- Do not leave the product in direct sunlight, or against car windows for long periods of time.
- Remove the equipment when the product is not in use, or moving about.
- Do not use equipment lubrication on this product. Only use a standard lubricant or grease when necessary.



◀ 中文使用说明

For more information on related products, please visit:

<https://www.vectoroptics.cn/>

