
VECTOR OPTICS

Universal Dovetail Adapter Mount for Glock® SCFRM-GK11

FOOTPRINT DIAGRAM


Recoil Pin A Recoil Pin B

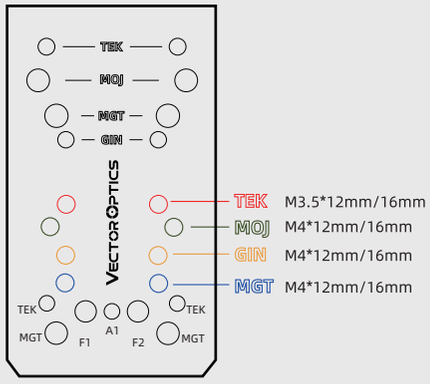

TEK M3.5*12mm/16mm
MOJ M4*12mm/16mm
GIN M4*12mm/16mm
MGT M4*12mm/16mm

TEK Bx4

Compatible with Doctor / Venom

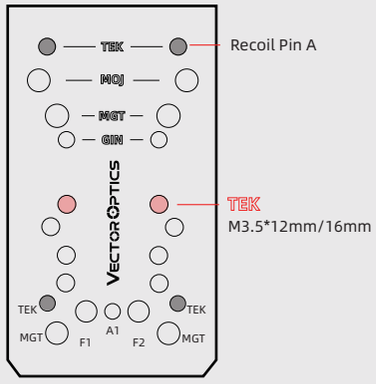


Recoil Pin A

TEK M3.5*12mm/16mm

MGT Ax2

Compatible with Shield RMSc

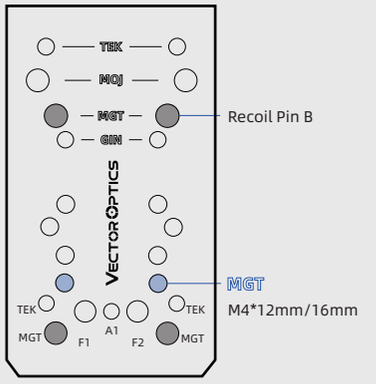


Recoil Pin B

MGT M4*12mm/16mm

MOJ Ax4

Compatible with RMR / SRO

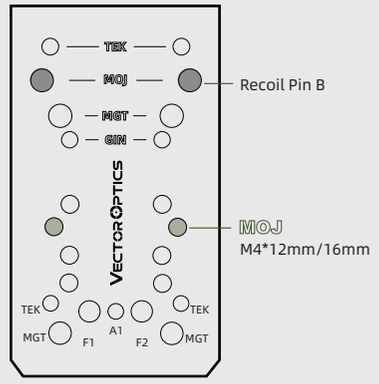


Recoil Pin B

MOJ M4*12mm/16mm

GIN Bx2


Compatible with Cmore RTS / STS

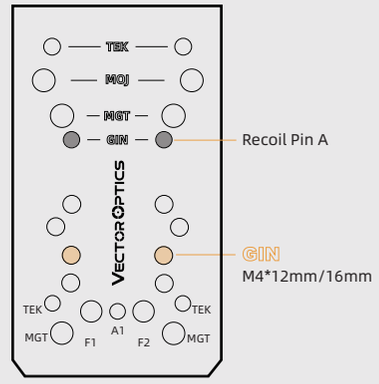


Recoil Pin A

GIN M4*12mm/16mm


MOUNT

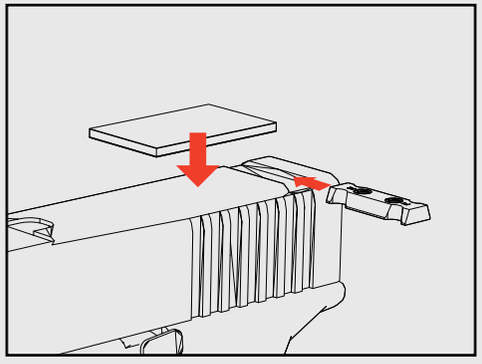


Position the slider and spacer in the mounting area, ensuring that both are properly seated.

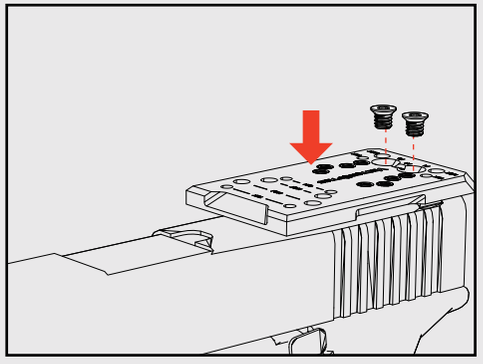

Place the adapter plate onto the spacer, aligning the screw holes with those in the slider. Insert the two adapter plate screws.

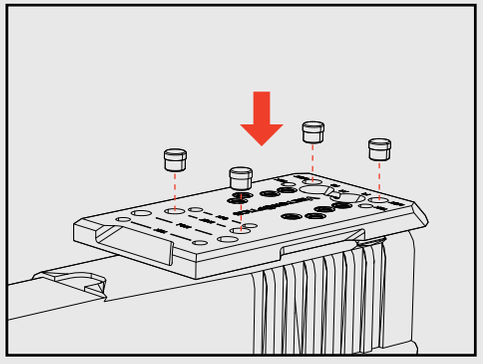

Install the locating pins only into the holes matching your red dot sight's footprint (refer to the footprint diagram). Do not install pins into unused holes.

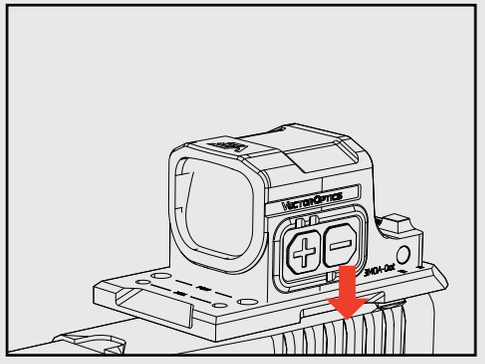

Lower the red dot sight onto the adapter plate, seating it fully over the locating pins.